



Crawl Space Vent Covers

INSTALLING A VENT COVER:

Both the recessed and outward mounting vent covers are designed to be installed from the outside of the home.


Vent covers can be installed into the cement block using the following:

- Glue (construction adhesive)
- 3/8" x 1.75" or 1/4" x 1.75" Tapcons, or 1.5" long screws with anchors

For best results run a bead of caulk around the mounting flange to block water and air leaks.


Insulate your Vent Covers from inside with rigid foam board, cut to fit, and glue in place.

Vent covers can be painted with any paint designed for use on plastic.

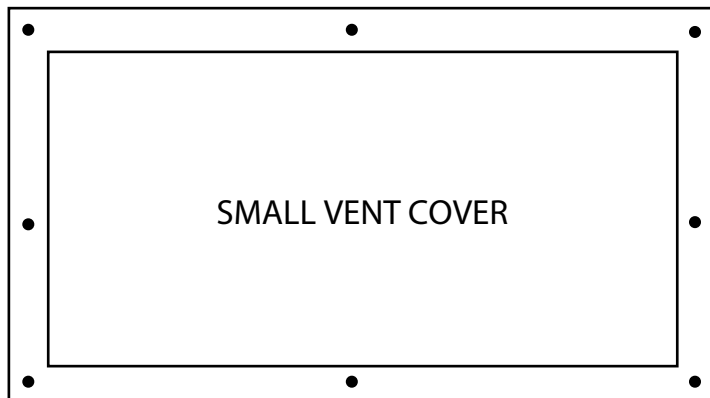

SMALL VENT COVER

SUGGESTED SCREW PATTERNS

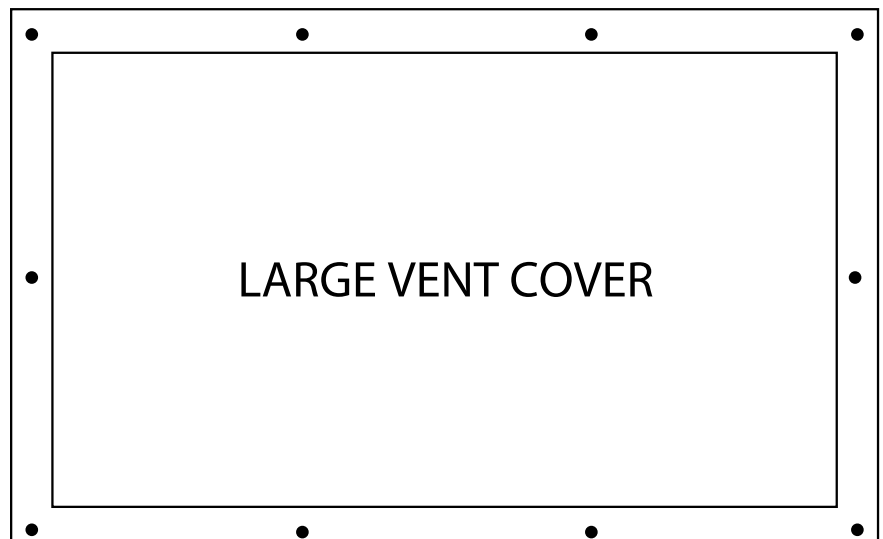

LARGE VENT COVER