


1820, 1830, 1850, and 1870 Series Dehumidifier Hanging Kit

Model 5660 and 5691 | Specification Sheet and Installation Instructions

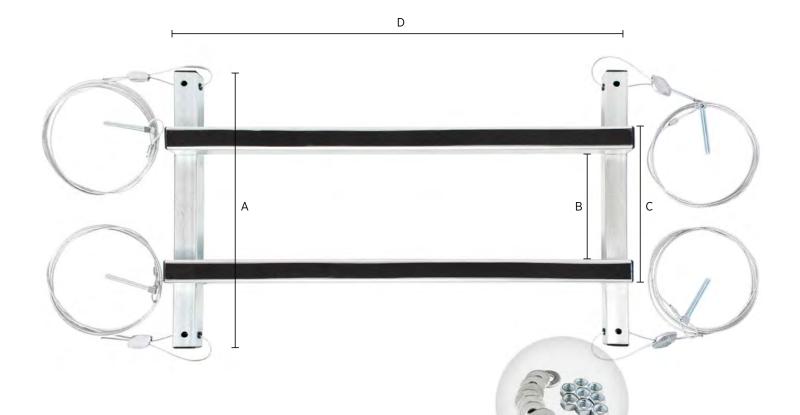

		MODEL 5660	MODEL 5691
		Compatible with Dehumidifier Models 1820, 1830 & 1850	Compatible with Dehumidifier Model 1870
Α	Width	18″	27"
В	Inside Rail Width	615/16"	10½″
С	Outside Rail Width	9 <sup>15</sup> ⁄16″	13½″
D	Length	297⁄8″	35″

SPECIFICATIONS				
Model	5660 Hanging Kit	5691 Hanging Kit		
Dimensions: (Hanging Kit Only)				
Width	18″	27"		
Height	615/16″	615/16″		
Length	291⁄8″	35″		
Weight	13 lbs.	18 lbs.		
Weight: (Working Load)	400 lbs.	400 lbs.		
Shipping Weight: (w/Carton )	14.6 lbs.	19.7 lbs.		

## MODEL 5660/5691 DEHUMIDIFIER HANGING KIT

- + 14 gauge zinc-plated steel
- + 1/4" thick black neoprene pads for vibration insulation
- + 10' cables with Gripple® clamps and 3 1/2" bolts
- + Total safe working load 400 lbs.
- + Parts bag includes (4) 3/8" flat washers, (4) 3/8" hex nuts, and Gripple key

## Installing an Aprilaire Dehumidifier with Model 5660 and 5691 Hanging Kits



Open box and remove the contents. Contents include:

- + Hanging bracket with cables and bolts
- + 8 nuts, 8 washers
- + Gripple key
- + Installation instructions





Unfold the hanging bracket so the support bars are perpendicular to the hanging bars.



3

Use two washers and two nuts on each cable bolt when mounting the hanging bracket to a structure. Make sure the structure can support the weight of the hanging bracket and dehumidifier.





Extend the dehumidifier feet approximately 3/4" to 1".





With the feet extended, center the dehumidifier on the hanging bracket, with the feet outside of the support bars.





Adjust the height of the hanging bracket by either pulling on the cable or inserting the Gripple key to release tension.





CAUTION: BRACKET AND DEHUMIDIFIER MUST BE SUPPORTED WHEN KEY IS USED TO RELEASE THE CABLE.



Set a level on top of the dehumidifier to make sure it is level in both directions.



AprilairePartners.com Form No. 914 • 277192 10.17 ©2017 Aprilaire – Division of Research Products Corporation

APRILAIRE RESERVES THE RIGHT TO CHANGE SPECIFICATIONS WITHOUT NOTICE.

P.O. Box 1467 Madison, WI 53701-1467 800.334.6011 F: 608.257.4357

